

HUGHES BOX BLIND WINDOW KIT

INSTRUCTIONS

Tools required for assembly:

Screw driver and adjustable wrench

Parts List:

4- Windows

8- Window tracks

4- Window handles


8- 1 1/2" Velcro adhesive pads (4 male and 4 female)

32- #8 x 1/2" machine screw with nuts

INSTRUCTIONS:

- 1) Peel plastic film off one side of the window.
- 2) Peel off adhesive tape off the window handle and place on the bottom of the window in the center. Make sure the bottom lip of the handle is against the bottom edge of the window and press firmly. (See Figure A.)
- 3) Peel plastic film from the back side of the window.
- 4) Measure from top left edge of window 12" (See Figure B). Peel adhesive cover off the

back of the 1" Velcro's adhesive pad. Place the pad to the right of the 12" mark and press firmly. The pad will be on the opposite side of the handle.

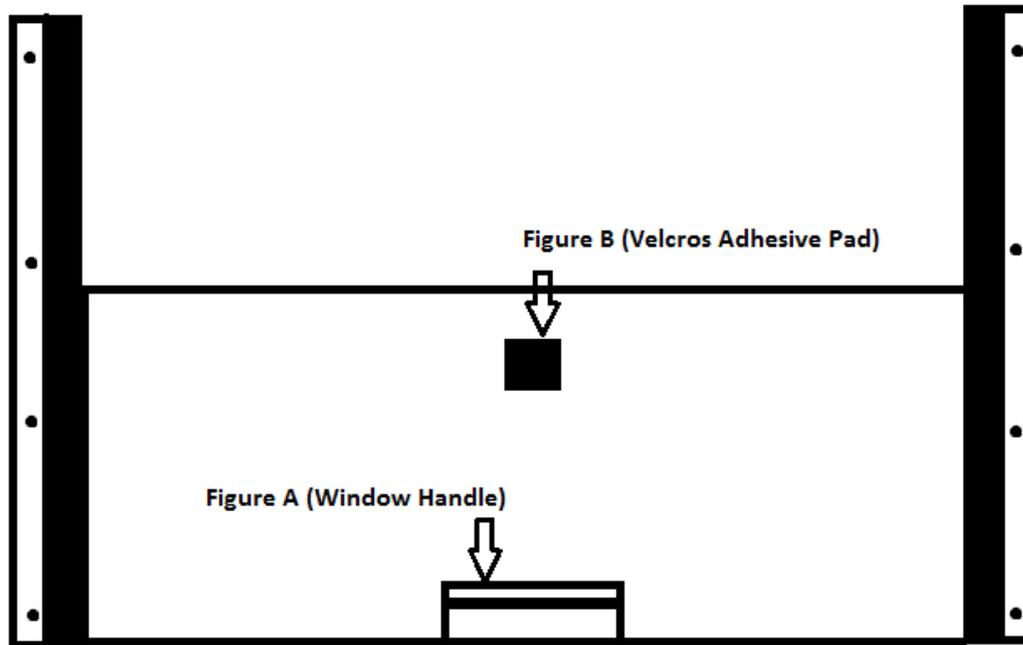

Installing window tracks:

Take one track and align the pre-drilled holes on the track with the pre-drilled holes on the blind around the opening for the window. Insert the screw into the hole and attach the nut. Do not tighten. Repeat this step on the other 7 window tracks. Next take a window and slide it into the tracks. It should rest on the 2x4 piece of wood that runs below the window. Once you have the window in the tracks, you can tighten all the screws. If it doesn't slide smoothly, you may have to re-drill the holes for a better fit using a 3/16" drill bit.

Installing Velcro Window Pads:

Take the window and slide it up into the open position. Locate where the velcros pad that you put on the top of the window hits on the blind wall and that is where you will put the velcros pad on the blind wall. Press the pad firmly against the wall of the blind. This will hold your window in the open position.